

MODELS - BL5*** PERPETUAL CHRONOGRAPH

Cal. No. E81*



IMPORTANT NOTE:

The second hand on this watch moves in one second steps to indicate that the charge level is sufficient for normal time keeping operation. If the reserve power drops to a level where more charging is needed, the second hand moves to the charge position on the dial as a reminder. When sufficiently recharged, the second hand resumes the one step movement. See Instruction Manual for complete Charging Guide.

TO SET TIME

Turn the crown clockwise or counterclockwise to move the mode hand to the time (TME) position.

Pull crown out to the second position (two steps out), second hand moves to the '0' position and stops. (If second hand stops at any other position, you must perform All Reset and Zero Positioning Adjustment shown in Instruction Manual).

Turning the crown changes the position of the hour, minute and 24 hour hands electronically: turning crown clockwise moves hands forward and counterclockwise moves hands backward. Rotating crown quickly causes hands to move in a continuous manner.

Turning the crown one 'click' in either direction while the hands are moving causes hands to stop.

Be sure to set time to correct a.m./p.m. by referring to the 24 hour hand. After setting time, push crown in to finalize time setting.

TO SET CALENDAR

The calendar is set while the mode indicator is in the time (TME) position. Pull crown out to the first position (one step out). The sweep second hand becomes the month indicator and moves to an hour marker (1-12) to indicate the month number. Example:

If the sweep second hand moves to hour marker 4, it would indicate that the month is April. At the same time, the function hand moves to a position on the upper right dial to indicate whether the year is a leap year or 1,2 or 3 years after a leap year. The '0' position on the function dial indicates a leap year and leap year +1,+2 and +3 are indicated by the three heavy markers following the '0' position.

To correct month number, press and release button B until sweep second hand indicates the correct month number. To correct leap year indication, press and release button A. To change the date, turn the crown counterclockwise one 'click' to move the date forward one by one. Rotating the crown counterclockwise quickly will cause the date to change in a continuous manner. To stop the advance, rotate the crown forward or backward one 'click.' Push crown in to finalize the calendar setting. Once calendar is set correctly and watch is kept charged up, automatic operation of month, date and leap year indication will continue until the year 2100.

TO USE CHRONOGRAPH

Turn the crown to set the mode hand to the chronograph (CHR) mode.

Press button A to start or stop the chronograph. A confirmation sound is heard when button A is pressed.

While measuring the elapsed time, sweep second hand records seconds and function hand

if button B is held down, the function hand will indicate 1/20 second total. To reset the chronograph hands to '0' after the chronograph is stopped, press and hold down

button A. Chronograph will measure up to a maximum of 59 minutes and 59.99 seconds in 1/20 second units and then stop at '0' position.

SETTING LOCAL TIME

The local time (L-TM) function allows the time to be set and displayed for a different time zone than your own.

Turn crown to set the mode hand to local time (L-TM) mode.

Pull crown out 2 steps to time setting position. Turn crown clockwise one 'click', hour, minute and 24 hour hands move forward one hour (always refer to 24 hour hand to set a.m./p.m. correctly). Turn crown counterclockwise one 'click', hands move backward by one hour. If while changing the time to a different time zone in the clockwise direction, 12:00 midnight is passed, date will advance one day. If time is changed in the counterclockwise direction and 12:00 midnight is passed, the date will be corrected but will take about 2 to 3 minutes.

USING THE ALARM

The alarm time should be set while referring to the 24 hour clock to assure that a.m./p.m. setting is correct. When set, it will sound for 15 seconds at the alarm set time each day. The sounding may be stopped at any time by pressing either button A or B. The alarm can only be set according to normal time (TME) mode.

Turn the crown to move the mode indicator hand to the alarm (ALM) mode. The second hand will move to the ON or OFF position and the hour, minute and 24 hour will move to the previously set alarm time.

Pull the crown out 2 steps to the time setting position. The alarm will automatically be set to the ON position.

Set alarm time by turning the crown clockwise to move hands forward and counterclockwise to move them backward. Be sure to refer to 24 hour hand so that correct a.m./p.m. time is set. While in alarm mode, with the crown still pulled out, you may change alarm set to ON or OFF by pressing and releasing button A. Push crown in to finalize alarm setting. While crown is in the normal position in alarm mode, if button A is pressed, alarm monitor tone will sound.

For further instructions, see instruction manual.